

Welcome

Congratulations on your purchase of a Mountain Buggy.

We know how precious and inspiring a new little person can be in your world. It's so important to be able to show your baby to the world and just as important to show the world to your baby.

At Mountain Buggy you and your baby matter to us. That's why we have spent years researching and developing a product that is safe, comfortable and in tune with modern parents' needs. We want you to be able to live your new family lifestyle with all the freedom and satisfaction you have always experienced.

We also know that many parents use strollers incorrectly and as a result may put their children at risk. Please take the time to read through this manual carefully. Your Mountain Buggy will provide you with optimum safety if you follow the instructions as detailed.

If you have any concerns, questions or comments about your Mountain Buggy or how to use it, please do not hesitate to contact us. We'd love to hear from you.

FOR THE SAKE OF YOUR PRECIOUS PASSENGER, PLEASE READ THESE WARNINGS BEFORE USING YOUR MOUNTAIN BUGGY.

Important: read instructions carefully, follow them strictly and keep this booklet for future reference. Your child's safety is your responsibility.



Capacity

- For all models, the seat is suitable for children from newborn up to 4 years old. For use with a newborn (0-6 months) the seat should be reclined fully. It is recommended that a newborn headrest or similar is used for babies 0-3 months.
Other newborn options include:
 1. Mountain Buggy® Carrycot (available for all models except Swift)
 2. Mountain Buggy® Carseat Adapter (available for all single models, except Swift).
- Maximum seat loading for all model Single strollers is 35kg/77lb, and 25kg/55lb per seat on Double and Triple versions. This seat is for a child of 100cm maximum height. Maximum loading for the storage basket is 5kg/11lb. Maximum loading for the pocket on storage basket is 300gm/10.5oz (ie only small items such as keys, wallets).



Important Use Information

- This stroller is designed for one child in each seat.
- Passenger should remain seated (no standing in the stroller).
- To prevent the stroller from becoming unstable, do not place parcels or accessory items anywhere except in the storage basket and pockets provided. Do not hang items such as shopping bags from the frame.
- Overloading and incorrect folding may damage or break this stroller.
- Accessories or replacement parts that are not approved by the manufacturer or distributor should not be used.
- Excessive weight may create hazardous unstable conditions.
- Do not use near an open fire or exposed flame.



Essential Warnings

WARNING: Never leave your child unattended.

WARNING: Prevent serious injury to your child by using the harness at all times. Always use the crotch strap in combination with the waist belt.

WARNING: Do not carry extra children or bags on this stroller.

WARNING: The stroller should not be used unassisted on stairs or escalators.

WARNING: Take care when folding or unfolding the stroller to prevent your fingers being entrapped.

WARNING: Any load attached to the handle affects the stability of the stroller.

WARNING: Make sure children are clear of any moving parts when you adjust this stroller, otherwise they may be injured.

WARNING: Put on all brakes whenever you park the stroller.

WARNING: This product is not suitable for running or skating.

WARNING: Use the safety wrist strap at ALL times the stroller is in use.

WARNING: Avoid serious injury from falling or sliding out. Always use seat belt.

WARNING: (Terrain model only) This seat is not suitable for children under 6 months.

Erecting and Folding the Stroller

Putting up your stroller

When you first receive your stroller, remove it from the box, remove the black caps on the rear axles (not on Urban Single or Swift) and plastic outer wrapping. Dispose of plastic wrapping safely to avoid a child suffocating.


1. Grip stroller near sunhood joints, and lift.
2. Place pressure on heel rest to ensure sliding locks are fully engaged.



Folding your stroller

1. Fold adjustable handle under (if applicable).
2. Flick the lock guard out and pull up the sliding lock on both sides of the heel rest.

NOTE: On Urban and Swift model strollers, ensure front wheels are unlocked and rotated forward before folding.

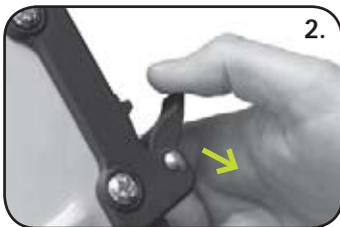

WARNING:

Check that all locking devices engage correctly and are not damaged before use.

Wheel Assembly

Front Wheel Assembly


1. Holding both knobs at the same time, unscrew and pull out the front axle.
2. Insert the front wheel.
3. Re-insert the axle and tighten both knobs by hand to secure wheel in place.



To remove

Repeat above in reverse.


NB: On Terrain Double remember to insert the spacer between the front wheels.

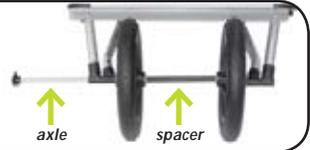

Rear Wheel Assembly

1. **For Urban and Swift Singles with push-in axle:**

- Push forward on the grey axle release tab and push the axles out slightly and release the tab.
- Push the axle out further until you hear a click.

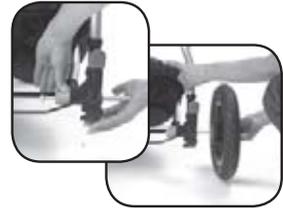

2. **For all buggies:**

- Slide wheels (with brake cog facing inwards) onto the axles.
- Push each wheel on until it clicks into place. Pull on the wheel to ensure it is secure.



To remove


Depress quick release clip and slide wheel off axles. Urban Single and Swift axles can be pushed in to reduce the total folded size. Push the axle release tab and push the axles in until they click into place.

Front Swivel Wheel (Urban and Swift models)


Locking the front wheel swivel(s) is recommended for use on uneven ground.

To lock: pull knob out and turn it so the 'locked' symbol is at the top. Then swivel front wheel under stroller until it locks into place.

To unlock: pull knob out and turn it 1/4 of a turn so the 'unlocked' symbol is at the top.

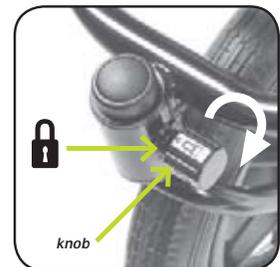

Safety Harness

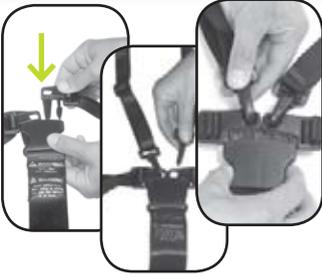

NB: Make sure baby is positioned down as far as possible in seat.



To fasten

1. Clip shoulder straps to waist strap buckles.
2. Push both waist buckle ends into crotch strap.

To release the harness

1. Squeeze the tabs on either side of the main buckle with thumb and forefinger.


To adjust width for a new born

1. Unclip all straps from the main buckle.
2. Thread the main buckle and crotch strap through the centre fabric slot on the seat.
3. Thread the side straps through the side fabric slots.

To adjust

1. Adjust sliding buckles so harness straps fit firmly.

NB: a separate safety harness conforming to British Standard BS6684 may be attached to the two 'D' rings located at the insertion of the waist harness.

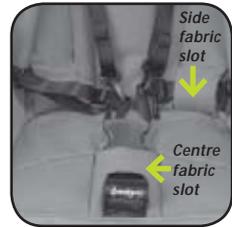


Shoulder Straps

The stroller comes with the shoulder straps set in the newborn position. Shoulder strap height should be located just below or level with a child's shoulders. The older the child, the further up the seat the straps need to be.

To adjust:

1. Locate buckle by slipping hand up the inside back of the seat.
2. Push the rectangular shaped buckle through the insertion slot on an angle, pushing the corner of the buckle first.
3. Re-thread the corner of the buckle through the most suitable height insertion slot for your child.
4. Once the buckle is through the slot, twist it so it is flat against the seat back and then check it is secure by pulling on strap.

NB: Initial adjustment from newborn position requires you to follow points 1 and 2, then continue to unthread until the shoulder strap is completely out of the hammock. Then rethread the shoulder strap at the right height as per the instructions 3 and 4.

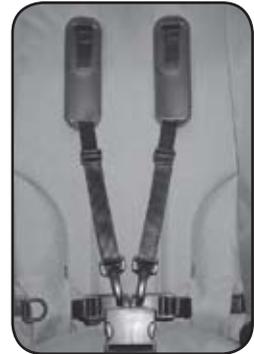


Seat Recline

The seat back can be reclined to any position between the upright and fully reclined positions.

To recline

Pull on the buckles to slide the straps through the buckles and recline the seat.

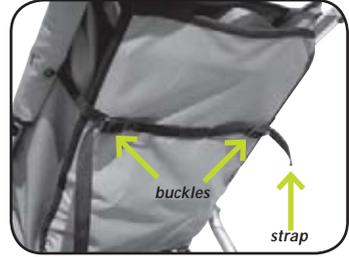

To raise

Pull straps through the buckles to raise the seat angle.



Brake



It is important to put the brake on whenever you park the stroller. Ensure it is on when putting your child in or taking your child out of the stroller.

To apply: push brake lever completely down.



To release: lift brake lever completely up.

Safety Wrist Strap

Use the safety wrist strap in all situations. Ensure that the loop of the strap is located around the wrist of the person pushing the stroller.

Care should be taken if the stroller is used down hills or in strong winds.



! WARNING: The stroller should not be used unassisted on stairs or escalators.

Removing Seat and Sunhood

Seat removal

1. Unfasten seat domes from frame along side tubes (4 domes each side).
2. Unfasten straps underneath seat and those attached to frame (1 strap each side).
3. Unfasten the domes which fasten the sunhood and seat together.



NB:

For Terrain models only, push seat forward then slide fabric up seat support wire and remove hammock wire from stroller frame.


To refit seat:

follow removal instructions in reverse.
Ensure fabric is domed **OVER** frame.



Sunhood removal

1. Pull support wire out of sunhood joint by pushing against frame and pulling wire downwards. *Note:* this operation is child proof and therefore requires a degree of force.
2. Repeat on opposite side.
3. Unfasten sunhood domes that attach the sunhood to stroller frame and to stroller seat back.

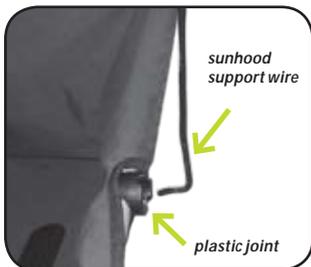

To refit sunhood:

follow removal instructions in reverse.



Buggy Care

Regular maintenance is needed to keep the stroller working effectively and safely.

Cleaning

- Fabric:** The outdoor fabric should be cleaned regularly. Brush off any excessive dirt or sand and rinse with lukewarm water. Fabric can be removed and washed by hand using a mild natural soap solution in lukewarm water (no more than 38°C/100°F). Rinse thoroughly. DO NOT tumble dry or dry in strong sunlight.
- Frame:** If the buggy is used in exposed environments such as salt water, salt spray or beach sand, wash any steel parts of the stroller by hosing the stroller or use warm soapy water, dry thoroughly and protect by spraying with light aerosol can oil, eg WD40® or CRC®.

NB: To avoid fabric fading, cover the stroller if it is exposed to direct sunlight through glass, eg in a car or if stored in exposed areas.

Fabric may fade due to intense exposure to direct sunlight.

Fabric may develop mould or mildew if stored in humid or damp conditions.

Storage


Store stroller inside in a dry place but away from central heating units/radiators and do not store in airing or hotwater cupboards.

NB: These tyres use natural rubber that may stain some surfaces. Do not park your buggy on a newly polished or varnished surface as the natural rubber may react with solvents or other chemicals present in the varnish or polish. When storing your buggy we recommend using a cloth or mat in between the tyres and hard surfaces such as vinyl, linoleum, polished flooring or your car's interior surfaces such as seats and plastic trims.

Wheel Alignment (Terrain only)

It may be necessary to periodically adjust wheel alignment if the stroller steers to one side.

1. Loosen all four nuts holding struts in position.
2. Slightly tighten outside nut on the opposite side to the direction it is pulling (eg if it's steering to left tighten nut D).
3. Test the stroller by pushing it on a smooth flat surface.

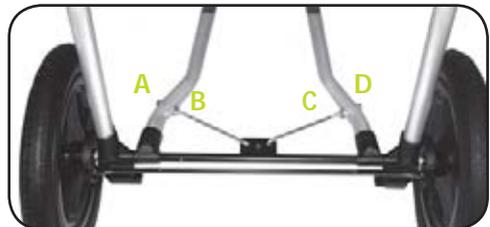

Buggy Care (continued)

4. When the correct steering is achieved, turn the outside nut on the opposite side so it just touches the side of the tube.
5. Tighten the inside nuts.

Tyres/Tubes

1. If a puncture occurs the inner tube can be repaired with a bicycle repair kit, or replaced. If tread becomes worn the tyre should be replaced. Contact your local dealer, or most cycle stores have tubes and repair kits.
2. Inflate tyres to pressure of 20psi (140KPa). Do not exceed 30psi (210KPa).

Handlebar Grip


Take care to protect the handlebar grip from abrasion or sharp objects. Your authorised dealer can arrange replacement grips and instructions if required.



Brake

The brake should be lubricated regularly to maintain optimum operation. It may require extra lubrication if it is difficult to operate.

lubricate this surface

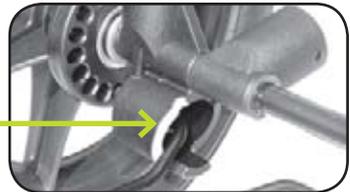

Top Tips

Transporting your Stroller

A special locking strap is located on the handlebar support bar. Wrap this strap around the axle and then clip fasteners together to secure stroller closed when folded.

Sunhood

The sunhood can be fastened back by applying the velcro on the sunhood window flap to the velcro on the inside edge of the sunhood.



Pump

To use the pump, remove the connection hose and attach relevant ends to top of pump and wheel valve. Do not overtighten. Ensure there is no tension on the connection hose while inflating tyre.

Protective Covers (Sun and Storm)

Fasten these accessories to the top and side tubes using the Velcro tabs. The covers fit over the sunhood and the elastic loops are placed over the lugs beneath the footplate.

Note The Swift suncover zips onto the front of the stroller sunhood.

Important

- Remove the storm or sun cover before folding the stroller to avoid damage.
- Remember not to leave the storm cover on in warm conditions, and check your child's comfort frequently.



Bumper Bar (not supplied with all models)

To attach the Bumper Bar:

1. Pull fabric back above vertical tube to expose the frame.
2. Fit snap-lock of bumper bar to frame, between vertical tube joint and sunhood joint.
3. Close locks on both sides to securely lock onto frame.



WARNING: The Bumper Bar does not replace safety harness. Secure infant in safety harness at all times. Do not use the Bumper Bar as a carrying handle.

Mountain Buggy World Warranty

Our warranty & service promise

In the world of Mountain Buggy, parents and children who use our products are the people that matter most to us. Quality and safety are two of our most valued attributes. For this reason, we offer a warranty programme that will give you total confidence in the quality of our products.

A **three year warranty** is applied to the frame and fabric of all Mountain Buggy strollers. A **one year warranty** also applies on any authorized Mountain Buggy product accessories. The warranty is valid in any country where Mountain Buggy has an approved distributor (please see the back of this instruction manual for details of the location of regional distributors).

If during the warranty period our product has a manufacturing fault we will repair it free of charge. If it is not practical to repair it then we will, at our sole option, replace the part in question.*

Key Benefits

Is it transferable?

YES! Mountain Buggy products are built to last, so the balance of our stroller warranty is fully transferable to a second user as long as they reregister the product. Registration is via the warranty card included in the back of this instruction manual or online at www.mountainbuggy.com

What is covered?

This warranty covers all defects in workmanship and materials, as long as the product has been used and stored in normal conditions, in accordance with the instructions and has been properly maintained.

What is not covered?

We have taken great care in this manual to outline how your product needs to be looked after and used and therefore we cannot be responsible for anything that you choose to do that is not in line with these instructions. Excluded from the warranty is any product:

- That has been incorrectly assembled
- That has been modified or repaired by an unauthorized source
- That has been damaged by misuse, accident, abuse or neglect
- That has been damaged by corrosion, rust or fabric damage due to storage in extreme environmental conditions, including without limitation high humidity, salt spray, ice or snow.

Mountain Buggy World Warranty (continued)

- That has not been cleaned and maintained according to our specifications
- That has failed due to normal wear and tear, including without limitation wear and tear to handlegrips and fabric and fading of fabric and components.

Our warranty also does not cover tyres and inner tubes.

Are there any extra charges?

The customer is always responsible for any freight charges to send the faulty product to a Mountain Buggy Customer Care Centre. Mountain Buggy will cover all return freight costs to you for warranty items but may charge a fee if the product is not covered under the warranty conditions.

Anything else you should know?

Loan strollers may be available and will be allocated on a case by case basis.

If you have a general repair requirement please call our Customer Care Centre to discuss how we may be able to assist.

Is anything excluded?

Unless we have agreed specifically in writing, we will have no liability to you or any other person for any damage of any kind caused to you or any other person as a result of using any Mountain Buggy branded product.

Who should you contact?

To have a chat about any concerns related to any of our products or about the full terms of the Mountain Buggy World Warranty or if you would like to make a claim, please contact one of our Customer Care Centres in your area as outlined on the back page of this booklet.

**The customer may have additional rights or remedies under consumer protection legislation in some countries or states.*

Parts of the Stroller Frame



Note: Diagram is Urban Single Model

*Points to lubricate periodically