



terrain urban

PEG PÉREGO SINGLE CARSEAT CLIP INSTRUCTIONS

model: primo viaggio

IMPORTANT - KEEP FOR FUTURE REFERENCE

The stroller seat does not need to be removed to fit Carseat Clip.

This Carseat Clip only fits the Peg Pérego model: **primo viaggio**.

These instructions are for the Peg Pérego Carseat Clip which fit the following model strollers only:

TERRAIN

Single - T1204



URBAN

Single - U1204




⚠ WARNING

- Check you have the Peg Pérego model: **primo viaggio** Car Seat for this Carseat Clip.
- Do not use this accessory on any other stroller as it may be unsafe.
- Do not use this Carseat Clip until you have read and understood the instructions!
- Incorrect use can mean serious injury or death to an infant!
- Never leave your child unattended.
- Check that car seat and Carseat Clip are secure and cannot move forward, back, sideways or upwards.
- Make sure infant is harnessed into the car seat using the car seat manufacturer's instructions.
- Do not leave baby in car seat (on or off stroller) for long periods of time.

STAGE ONE

1. Temporarily Remove Sunhood


The sunhood wires need to be removed from sunhood joints to allow Carseat Clip to be fitted. These wires are re-attached to stroller once Carseat Clip has been fitted.

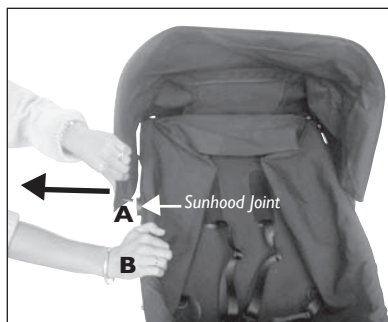

ALL MODELS

- 1 Pull support wire out of sunhood joint **A**. This operation is child proof and therefore requires a degree of force. To assist in pulling support wire out, push against stroller frame with other hand **B**.
- 2 Repeat step (1) on other side.

2. Partial Seat Unfastening

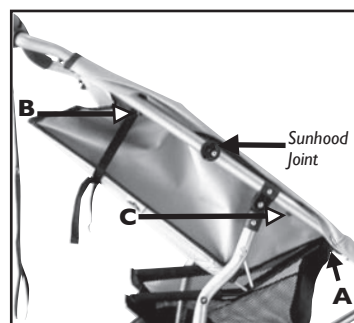

URBAN

- 1 Loosen the strap beneath seat at point **A**.

ALL MODELS

- 2 Unfasten two middle fasteners on both sides of stroller (at **B** & **C**) and peel fabric back, exposing frame.
- 3 Recline seat slightly.


STAGE TWO

Fitting Carseat Clip to Frame

The Carseat Clip comes assembled for Urban model.

TERRAIN ONLY

Before placing Carseat Clip on stroller frame, the Snap Locks at points **B** need to be removed and placed at points **C** (on both sides).

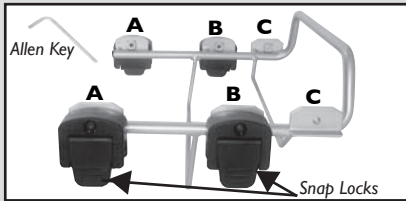


(i) Using Allen Key supplied, remove Snap Locks at points B (both sides) by rotating screw in an anti-clockwise direction.

(ii) Using Allen Key supplied, fasten removed Snap Locks at points C (both sides) by rotating screw in a clockwise direction until screw is tight and Snap Locks are secure.


TERRAIN & URBAN

- 1 Open all four Snap Locks by lifting up levers.
- 2 Press **Carseat Clip** on to frame so that **TOP** Snap Locks are directly above sunhood joints (on both sides).

TERRAIN

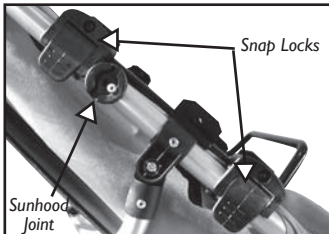

URBAN

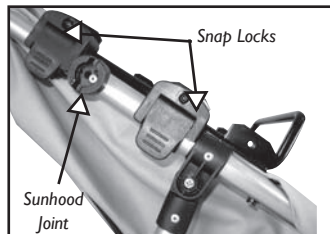

- 3 Close all Snap Locks down flat, making sure you hear the lock "click" - indicating they are fully locked.



OPEN POSITION



CLOSED POSITION

WARNING

- Make sure infant is harnessed into the car seat using the car seat manufacturer's instructions.
- When fitting car seat onto Carseat Clip, ALWAYS KEEP A STEADYING HAND ON CAR SEAT AND INFANT.
- Check Carseat Clip is located correctly on to stroller frame. Refer back to diagrams to ensure positioning of snap locks are correct.
- Check car seat and Carseat Clip are secure and cannot move forward, back, sideways or upwards.
- Do not use Carseat Clip if you are unable to secure car seat or Carseat Clip. In this case contact store where stroller was purchased or distributor for your country, for more help.
- IT IS RECOMMENDED THAT YOU PRACTISE THE FOLLOWING INSTRUCTIONS WITHOUT INFANT IN CAR SEAT.

STAGE THREE

Re-Attaching Sunhood Wires

- 1 Push sunhood wires back into sunhood joints (refer Stage One)

Fitting Car Seat onto Carseat Clip

Pictured on Urban



- 1 Place car seat in **Carseat Clip** so that infant is facing the stroller handle bar.



- 2 Ensure the car seat latches have clicked on to the **Carseat Clip** bars **A & B**. Bar **C** fits into car seat slot.

STAGE FOUR

Removing Car Seat from Carseat Clip



Unlock the car seat from the Carseat Clip by pulling the latch handle and lifting car seat upwards.

STAGE FIVE

Removing Carseat Clip from Stroller

- 1 Remove sunhood wires (refer Stage One).
- 2 Open all four Snap Locks by lifting up levers.
- 3 Lift Carseat Clip off stroller frame.
- 4 Re-attach sunhood wires (refer Stage Three).
- 5 Re-attach two middle fasteners on both sides of stroller.

URBAN

- 6 Tighten strap beneath seat (refer Stage One).